


# ThermoFloat Spa Blanket

## Instructions


1. Measure your spa's inside surface dimensions at the waterline, using a tape measure. Note the measurements in inches below:

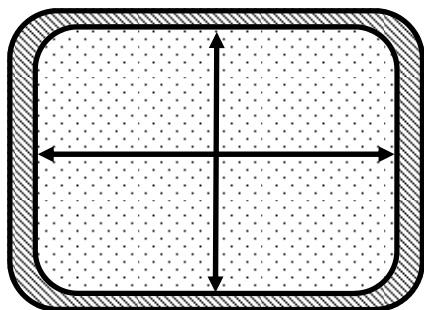

Length:

Width:

2. Unfold your new ThermoFloat onto a flat surface such as lawn or indoors on a floor. Mark the dimensions above on the ThermoFloat with a marking pen. **It is best to cut the ThermoFloat about 1" LARGER than the actual dimensions.** (For example, if your spa's inside waterline measurement is 80" x 85", you would use 81" x 86"). Cutting it a bit larger will help keep it from shifting during the spa's filtration cycle.

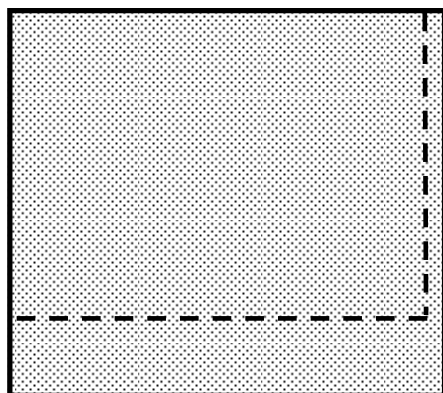

3. Using scissors, trim the ThermoFloat to size.




4. Now place the trimmed ThermoFloat in your filled spa. Using the marker, trace around rounded corners and other spa features requiring a cutout or trimming.

5. Trim with scissors.

6. When not in use, drape over your spa cover or fold dry blanket and return to plastic bag.

7. Gently rinse your ThermoFloat with a garden hose & clean surface with CleanAll non-foaming cleaner every month or two.

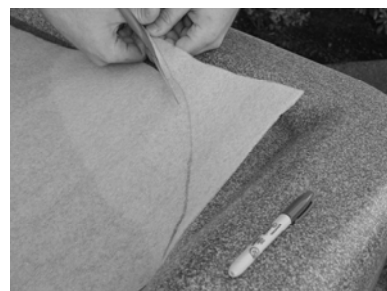

[www.SpaDepot.com](http://www.SpaDepot.com)